



HT08-020, STR3

Connection: 4 leads
Drive settings: 0.4A/phase, 20000 steps/rev

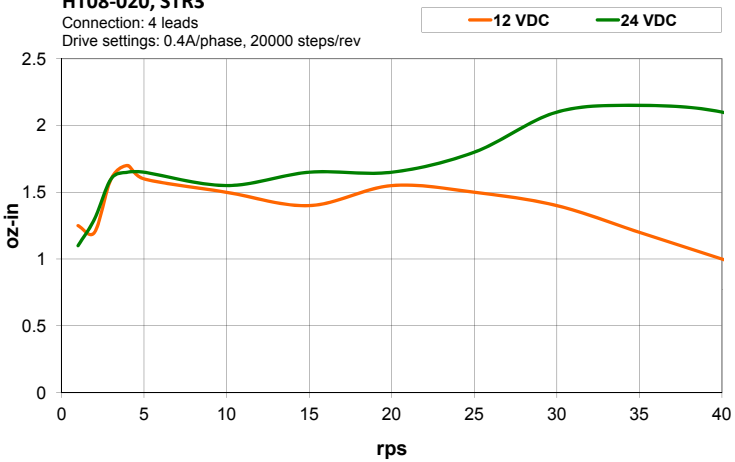


HT08-021, STR3

Connection: 4 leads
Drive settings: 0.4A/phase, 20000 steps/rev

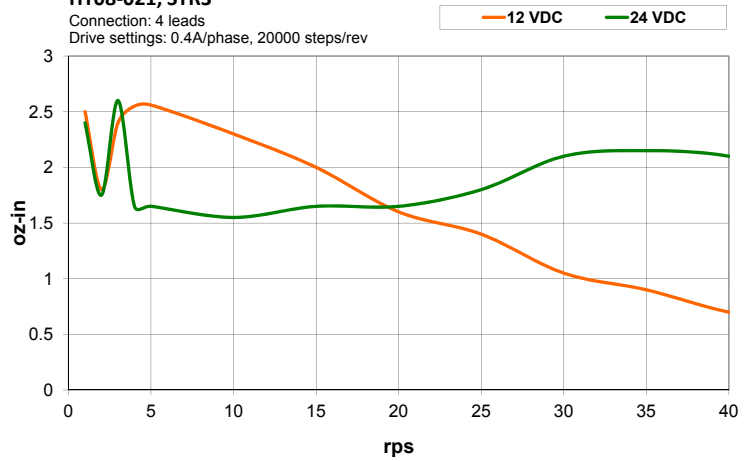


HT11-012, STR3

Connection: 4 leads
Drive settings: 1.2A/phase, 20000 steps/rev

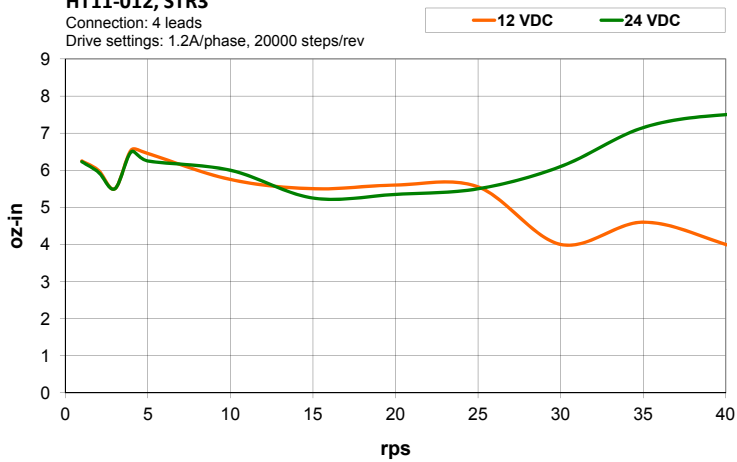


HT11-013, STR3

Connection: 4 leads
Drive settings: 1.2A/phase, 20000 steps/rev

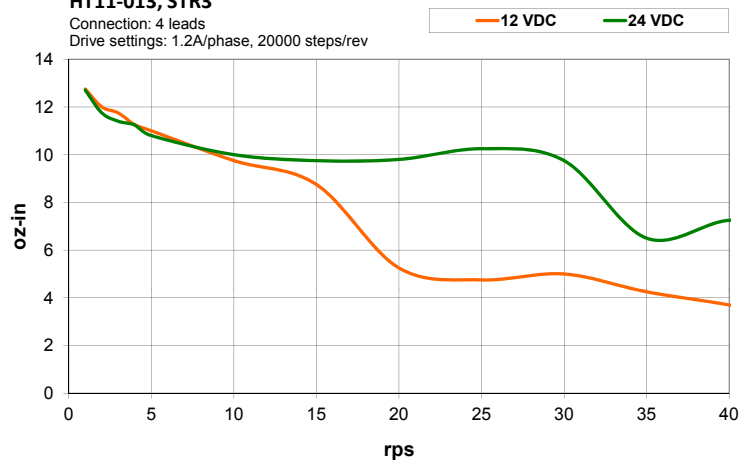


HT17-268, STR3

Connection: parallel
Drive settings: 1.6A/phase, 20000 steps/rev

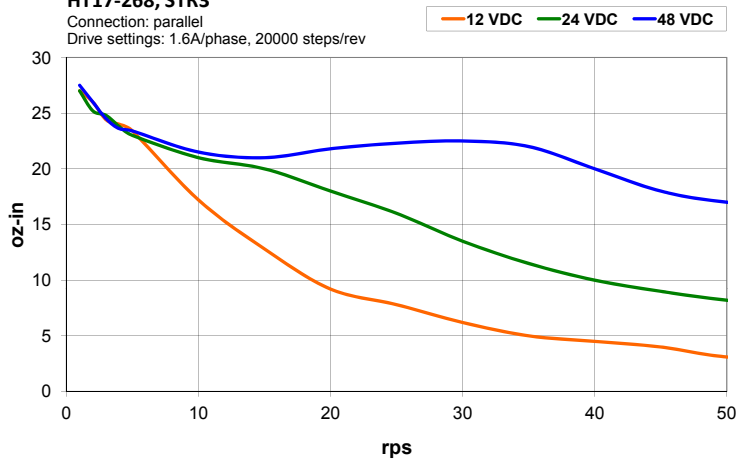


HT17-271, STR3

Connection: parallel
Drive settings: 2.00A/phase, 20000 steps/rev

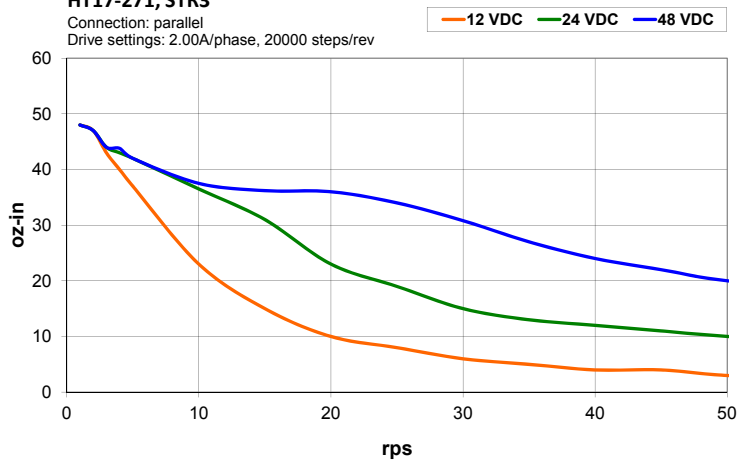


HT17-275, STR3

Connection: parallel
Drive settings: 2.00A/phase, 20000 steps/rev

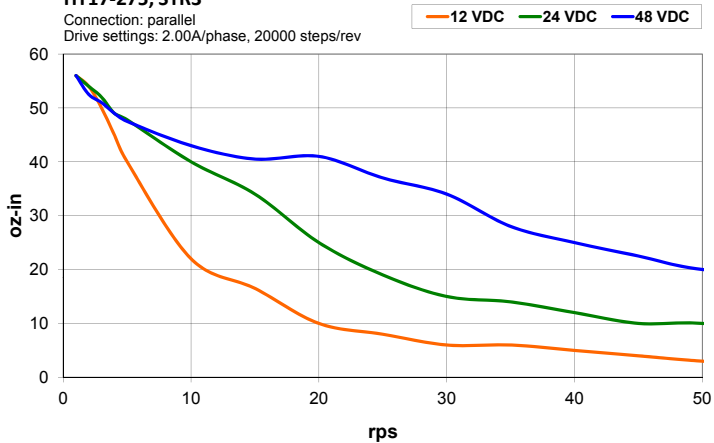


HT23-595, STR3

Connection: series
Drive settings: 2.4A/phase, 20000 steps/rev

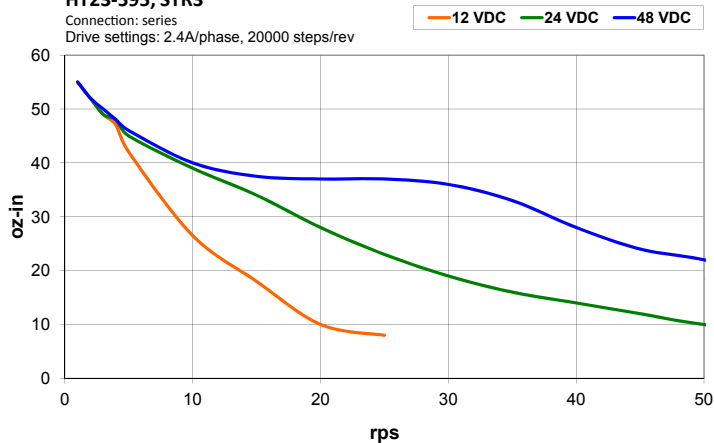


HT23-598, STR3

Connection: series
Drive settings: 2.4A/phase, 20000 steps/rev

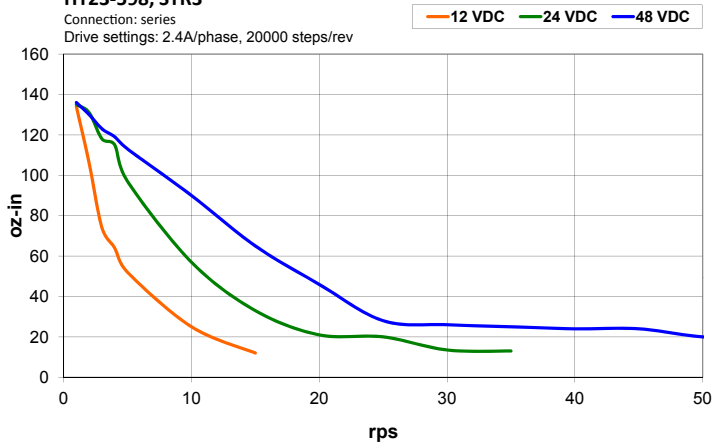

HT23-601, STR3

Connection: series
Drive settings: 2.4A/phase, 20000 steps/rev

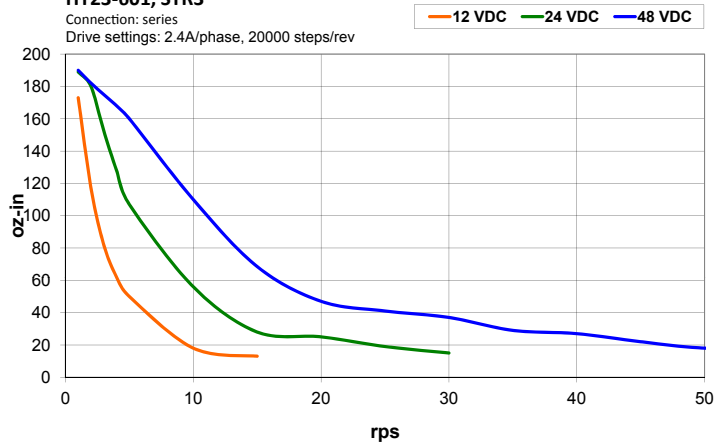

HT24-100, STR3

Connection: 4 leads
Drive settings: 3 A/phase, 20000 step/rev

